


JP1-close JP2-open = supply from wing
 JP1-open JP2-close = supply from USB, selfpowered wing
 JP1-close JP2-close = supply from USB, USB powered wing
 JP1-open JP2-open = Invalid

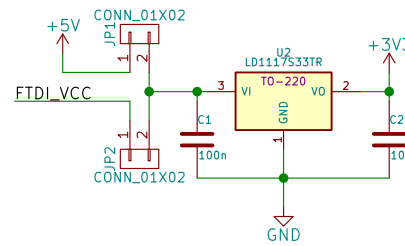

Sheet: /
 File: WingPcAdapter.sch

Title:

Size: A4

Date:

Rev:

KiCad E.D.A. kicad 0.201501062116+535520ubuntu14.04.1-product

Id: 1/1